

Termo de Garantia

Este produto é garantido pelo prazo de 3 (tres) anos a contar da data de emissão da Nota Fiscal de compra. A garantia total cobre defeitos de fabricação, material, peças e a respectiva mão de obra para o conserto, após a devida comprovação pelos técnicos credenciados. A garantia será nula se o produto sofrer danos resultantes de acidente, montagem incorreta, uso indevido, descuido, ação de agentes corrosivos, carga excessiva, parafusos ou porcas mal apertadas, desconhecimento das instruções contidas no Manual de Instruções ou se apresentar sinais de haver sido reparado por pessoas não autorizadas . O comprador será responsável pelas despesas de transporte e embalagem até o Serviço Autorizado mais próximo. Esta garantia é intransferível e válida somente mediante a apresentação da Nota Fiscal de compra. Este produto está sujeito a modificações técnicas e de desenho para seu aprimoramento sem aviso prévio do fabricante

Warranty Terms

This product is warranted to the original retail purchaser as follows:
You must retain the original sales receipt showing purchase date and terms of sale.
LIMITED WARRANTY: When purchased from an authorized dealer, this product is warranted against defective materials or workmanship for three years of useful life, based on reasonable use. Your exclusive remedy for this Warranty is that The manufacturer will, at its option and within a reasonable amount of time, repair, or replace this product or refund the original purchase price of this product. This option makes this a limited warranty. To make claim under this warranty, you must contact the authorized dealer from whom the product was purchased, or if you cannot locate the authorized dealer, contact: suporte@brasforma.com.br. The manufacturer reserves the right to discontinue or change parts, models, and products or to make substitutions.
WARRANTY LIMITATIONS: This warranty does not include:
• Any condition resulting from incorrect assembly or inadequate maintenance, cleaning, or care, or commercial use.
• Any condition resulting from other than ordinary residential wear and tear or from any use for which the product was not designed.
• The use of this product for rental use or for use in business or institutions or other heavy duty applications.
• The matching of color, grain, or texture of wood.
• The use of this product by an unattended child or disabled person. This warranty does not cover damage from transportation by a common carrier. Under no conditions is the manufacturer liable for any of following: loss/fall and/or damage to TV's, electronic devices, a computer; loss of or damage to programs, records or data; and consequential or incidental damages, even if informed of their possibility.
LIMITATIONS OF DAMAGES: THE WARRANTIES AND REMEDIES SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, ORAL, WRITTEN, EXPRESS OR IMPLIED, IN NO EVENT WILL BRASFORMA BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING INCIDENTAL OR CONSEQUENTIAL DAMAGES, ARISING OUT OF THE USE OR INABILITY TO USE THIS PRODUCT.
LIMITATION OF WARRANTIES AND OTHER WARRANTY TERMS AND STATE LAW RIGHTS, ANY IMPLIED WARRANTIES, INLCUDING IMPLIED WARRANTIES FO MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION AND TERMS OF THIS EXPRESS WRITTEN WARRANTY.
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.The manufacturer does not authorize any person to create for it any other warranty, obligations, or liability in connection with this product.
DISCLAIMER OF DAMAGES The remedies provided herein are BUYER'S sole and exclusive remedies and in no event shall SELLER be liable for direct, indirect, special, incidental, or consequential damages (including loss of porifts) whether based on contract, tort, or any other legal theory.

- Garantia: 1 ano - Garantia: 1 año - Warranty: 1 year.



BRASFORMA Indústria e Comércio Ltda.
Av.Henry Ford, 732 - Moóca - São Paulo - SP - Brasil
☎ : 55 (11) 2246-0200
e-mail: suporte@brasforma.com.br
Fabricado na China -Hecho en China- Made in China

SBRP 754

Instruções de Instalação de Montagem do Projetor

ATENÇÃO

Abra, identifique e conte todos os componentes deste suporte, utilizando o gabarito, utilizando o gabarito. Utilize uma superfície plana para separar e contar as peças.

ATENÇÃO

- 1) Caso você não tenha afinidade para fazer a instalação, chame um profissional qualificado.**
IMPORTANTE: Se a instalação for realizada por um técnico, assegure-se de que o mesmo tenha lido as instruções de montagem. O desconhecimento das instruções pode levar à queda do suporte e dos aparelhos que estejam sustentados.
2) SUPERFÍCIE DE INSTALAÇÃO: Os acessórios incluídos são apropriados unicamente para fixação em paredes de alvenaria ou tetos de concreto, blocos de concreto, ladrilhos.
IMPORTANTE: Para paredes mais frágeis, por favor, consulte um profissional qualificado.
3)LOCAL DE INSTALAÇÃO: Deve-se evitar a instalação do suporte sobre camas, cadeiras ou similares.
4) CUIDADO: Afaste as crianças da área de trabalho durante a instalação e **NUNCA** permita que crianças manuseiem o equipamento.
5) VERIFICAÇÃO DA INSTALAÇÃO DO PROJETOR: Verifique se o PROJETOR está bem colocado e os parafusos de fixação bem apertados, para evitar a queda do aparelho.
IMPORTANTE: Se tiver alguma dúvida, quanto à segurança, recomenda-se procurar um profissional qualificado.
6) MANUTENÇÃO: Como todo produto regulável, faça o reaperto dos parafusos depois de uma semana de instalado e, posteriormente, a cada mês, verificando os seguintes itens:
• Se a placa de fixação no teto está bem aderida. • Se o equipamento eletrônico está bem preso no suporte. • Se os parafusos/porcas estão bem apertados.

Projector Mount Installation Instructions

WARNING

Open, identify and count all hardware and parts. You should have everything on the hardware included list provided with these instructions.
Assemble them on a flat surface to assure that parts fit together squarely and flush; we recommend a carpeted surface. You may also use a blanket to prevent scratch of the piece during assembly process.

WARNING: WHEN INSTALLING THE BRACKET MAKE SURE TO FOLLOW THE INSTRUCTIONS THOROUGHLY!! FAILING TO DO SO MAY CAUSE BRACKET TO FALL AND EXTENSIVE DAMAGE NOT COVERED BY THE WARRANTY OF THIS PRODUCT.

- 1) If you are not familiar with the necessary procedures to install this type of product, call a qualified professional.**
WARNING: If installation is to be made by a professional, make sure this person reads the installation instruction. Ignoring instructions may cause the bracket and installed equipment to fall off.
2) INSTALLATION SURFACES: Included accessories are appropriate only for attachment to brick walls, concrete ceilings, concrete blocks, glazed tile, or drywall.
WARNING: For more fragile walls, please call a qualified professional.
3) INSTALLATION PLACE: NEVER install products above beds, cradles or similar locations.
4) WARNING: Keep products out of children's reach, and **NEVER** allow children to handle equipment or tools.
5) CHECKING TV INSTALLATION: Check if TV set is properly installed and that mounting screw are tight to ensure the TV set does not fall down.
WARNING: If you have any doubt concerning safety, please call a qualified professional.
6) MAINTENANCE: As with any adjustable product:
One week after first installed, make sure to check and retighten all nuts and bolts and monthly to:
• Make sure wall plate is firm and flush with ceiling. • Make sure appliances are securely in place. • Make sure all nuts and bolts are tight.

Antes de iniciar a instalação, certifique-se de que todas as peças foram incluídas em seu pacote. Você deve encontrar as seguintes peças:

Before beginning installation, make sure all parts have been included in your package. Your should find the following parts:



Drywall screw (x2)



Bucha plástica (x2)



Arruela M6.5 (x2)



Parafuso M4x16 (x4)



M5x45 Drywall screw(x2)



Plastic anchor(x2)



M6.5 Washer(x2)



M4x16 screw(x4)



Parafuso M4x40 (x4)



Parafuso M6x16 (x4)



Parafuso M6x40 (x4)



Parafuso de braço (x4)



M4x40 screw(x4)



M6x16 screw(x4)



M6x40 screw(x4)



M5x16 Arm screw(x4)



Arruela M5 (x4)



Arruela M5 (x4)



Chave Allen, S= 3 mm (x1)
Chave Allen, S= 6 mm (x1)




Braço (x4)



M5 Washer(x4)



M5 Washer(x4)

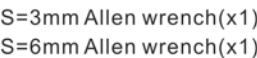

S=3mm Allen wrench(x1)
S=6mm Allen wrench(x1)



Arm(x4)



Suporte (ou aranha) universal (x1)



Placa de teto (x1)



Peça intermediária (x1)



Universal spider(x1)



Ceiling plate(x1)




Middle piece(x1)

Passo 1

Encaixe a peça intermediária na placa de teto e aperte os parafusos de segurança, usando a chave Allen fornecida.

Step 1

Put the middle piece into the ceiling plate, and tighten the safety screws using the allen wrench provided.

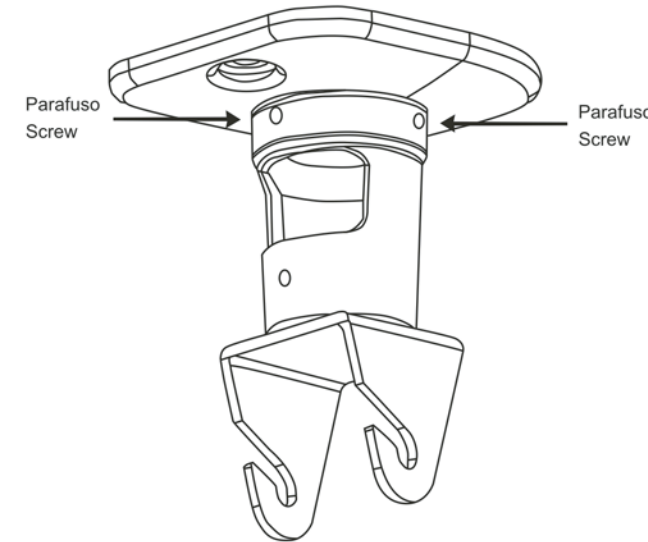


Passo 2

Prenda a placa de teto ao teto, usando os parafusos para parede de gesso. Certifique-se de parafusar diretamente em uma viga do teto, de forma que o suporte consiga sustentar o peso do seu projetor.

Step 2

Attach the ceiling plate to the ceiling using the drywall screws. Be sure to screw directly into a ceiling joist so that the mount can support the weight of your projector.

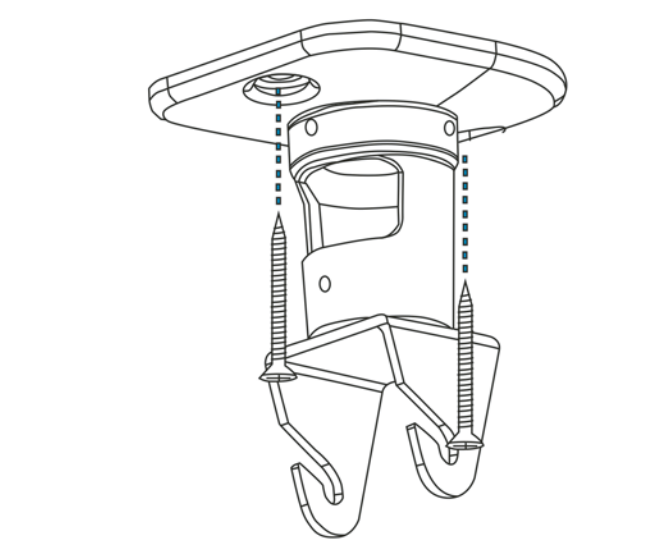


Passo 3

Prenda os quatro braços ao suporte universal, usando os parafusos e as arruelas. Não aperte por completo os parafusos ainda.

Step 3

Attach the four arms to the universal spider using the screws and washers. Do not completely tighten the screws yet

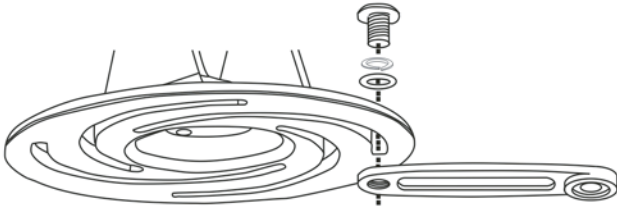

Passo 4

Prenda o seu projetor aos braços. Parafusos de vários tamanhos acompanham o suporte que você recebeu. Se nenhum deles for adequado, consulte o fabricante do seu projetor quanto ao tamanho correto. Uma vez terminado, certifique-se de que todos os parafusos do passo 3 foram apertados.

Passo 5


Fixe cuidadosamente o suporte universal, com o seu projetor preso à peça presa no teto. A instalação está completa.

Step 4

Attach your projector to the arms. Several different screw sizes have been provided with your mount. If none of them fit, check with the manufacturer of your projector for the proper size. Once finished, make sure all screws from step 3 are tightened.

Step 5

Carefully hook the universal spider with your projector attached to the piece attached to the ceiling. Installation is now complete.

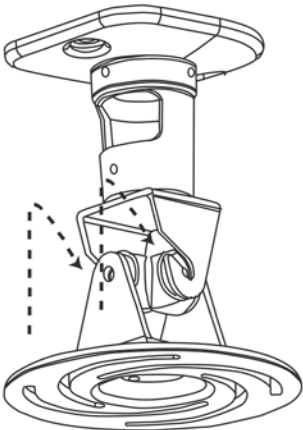

Ajuste

Você pode mudar a inclinação de seu suporte, movendo-o cuidadosamente para a posição desejada. Pode ser que você necessite apertar os dois parafusos de ajuste de inclinação a fim de fixar o projetor em posição.

Para alterar o direcionamento de seu projetor, primeiro desaperte os dois parafusos pivô, usando a chave Allen. Gire o projetor para a direção desejada e reaperte os parafusos.


NÃO GIRE O PROJETOR CONTINUAMENTE NO SENTIDO ANTI-HORÁRIO. Isto pode fazer com que o suporte se solte e cause lesão ou avaria.

Adjustment

You can change the tilt of your mount by carefully moving it to the desired position. You may need to tighten the two tilt adjustment screws to hold the projector in place.

To change the facing of your projector, first loosen the two swivel screws using the allen wrench. Turn the projector to the desired facing and retighten the screws.

DO NOT CONTINUALLY TURN THE PROJECTOR IN A COUNTER-CLOCKWISE DIRECTION! This can cause the mount to come apart and may cause injury or damage.

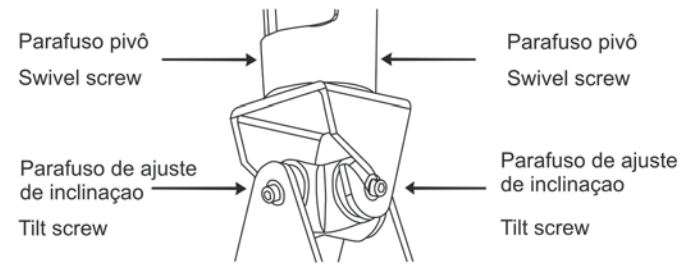

Desaperte o parafuso para ajustar o comprimento da extensão. E depois aperte.

Screw out when you adjust the length of the pipe. And then screw in.

